

PC600 Driver Installation for Windows XP

Unzip the PC600.zip file to your desktop another convenient location.

Right click on **My Computer**

Click **Properties**

Click the **Hardware Tab**

Click **Add New Hardware**

Click **Next**

Select "**Yes, I have already connected the Hardware**"

Click **Next**

Go to the end of the list and select **Add a new hardware device**

Click **Next**

Select **Install the hardware that I have manually selected from the list**

Click **Next**

Show all devices should be selected

Click **Next**

Click **Have Disk**

Browse to the location where you unzipped PC600.zip

The file PC600.inf should be appear in the File Name field beside the **OPEN** button.

If not, select it from the list.

Press the **OPEN** button.

The **INSTALL FROM DISK** dialog will appear.

Click **OK**

The **ADD HARDWARE** Dialog will appear.

In the **MODEL** list there should be one item, **PC600 Driver**

Click **Next**

Click **Next**

The **ADD HARDWARE** Dialog will copy some files and finish.

You may have to restart your computer.